



SM3300 Firmware Revision History

Legend:

- B = Bug fix
- \$ = valuable improvement
- N = New feature

Changes from P0110 to P0111

- N Extra info in front menu:
The front menu is extended with information about the serial number and the PUD text.
- N Powersink control via Ethernet commands:
New Ethernet commands have been added to edit the settings of a built-in Powersink.
- N Sequencer line number:
Introduction of difference between next sequence line number and active sequence line number.
Available via Ethernet commands and the web console.
- \$ Temperature sensor detection:
A more selective detection method of the internal temperature sensors.
- B Powersink settings restore:
In certain cases the settings of the Powersink had to be restored by hand after power-up cycles.
- B Sequence load crashes:
When sequences were uploaded and deleted in an intensive manner, the sequencer could crash.
- B Sequence with labels started conditionally:
When sequences, containing text labels, were started conditionally via INT MOD DIG, the sequencer crashed.
- B Large Ethernet packages caused command loss:
When a lot of commands were send at once so they didn't fit into one Ethernet package (max 1024 bytes), some commands were lost.

Changes from P0109 to P0110

- N Highlight function:
This feature allows the user to identify the unit in an audiovisual way. This feature is available via the web server or via an Ethernet command. The front panel display of the unit will blink several times and a sound signal is generated at the same moment.

- N Voltage and current limits:
The methods to control the voltage and current limits is extended. Besides the front panel menu, it is also possible to adjust the limits via the web server and Ethernet commands.

- N Sequence trigger:
So far the sequence trigger function was only available via an Ethernet command. From this release on this function is also accessible via the web server's sequencer console.

- \$ Overload indicators:
The web server will now indicate whether or not the analogue inputs of an Int Mod Ana are overloaded (if installed).

- B PROG:SEL:STEP ?:
This Ethernet command did not behave properly in case of sequences that were triggered via digital inputs (via Int Mod Dig).

- B *PUD?:
This Ethernet command returned bad characters if *PUD was never programmed before.

- B Password:
The password change option on the web server was not limited to the correct maximum length.

Changes from P0108 to P0109

- N Communication WatchDog:
This feature checks if the Ethernet communication and commands are valid and received in time. If not, the output of the power supply is switched off.

- \$ PFC regulation for Uin > 500Vac:
The regulation is improved for high input voltages. Reduces noise on the input and extends the power components life time.

- \$ PFC safety routines:
In extreme circumstances (e.g. very high input voltages, over temperatures, etc) the safety routines respond to the situation more gentle.
The previous routines were save as well, but quite brutal.

- \$ Internal auxiliary voltage checks:
The number of checks of internal analogue signals is expended.

- B Web Server fan speed:
Fan speeds close to the maximum result in true rpm in stead 0 rpm.

- B Ethernet command *sav:
In case of missing PUD (Protected User Data), this command returned an error.
This is fixed by creating an empty string when PUD is missing.

- B Web Server backlight intensity limits:
Limits made equal to the limits of the front menu.

- B Web Server Interface text:
For the Int Mod Ana, the wrong text was displayed for pin 6. This is changed to the correct text: "PSOL".